


delicious

Quickstart Manual


Step 1: Audio cabling

Connecting the Devious to your turntable and mixer.

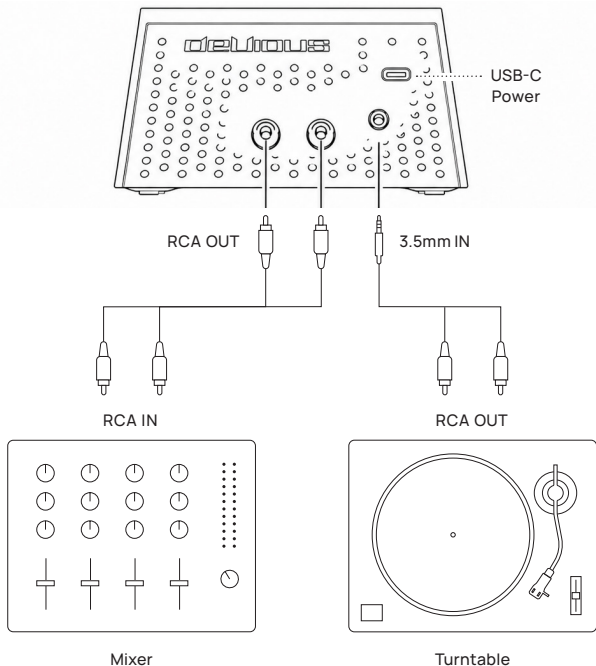

Step 2: Powering the Devious


After plugging in, press the power button on the cable. Wait for the red light and logo to appear. It will boot into the app after approx. 15 seconds.

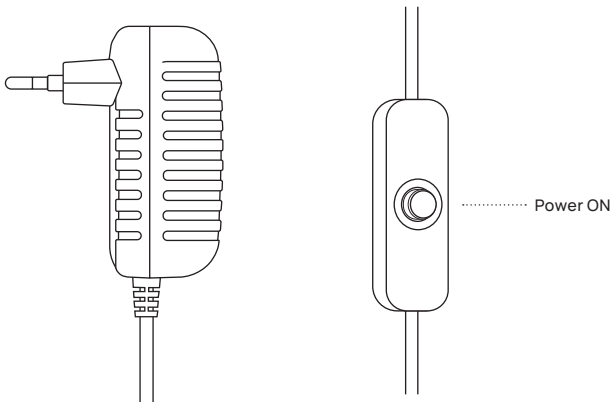

**Note: Only use the provided power adapter, 5V, 3A;
Do not use your phone or laptop adapter!**

Step 3: File browser

- Plug-in a USB drive
- Browse folders
- Sort by ID3 tag or search within a folder
- Long-press a track to load
- Tap waveform at bottom to switch to play view

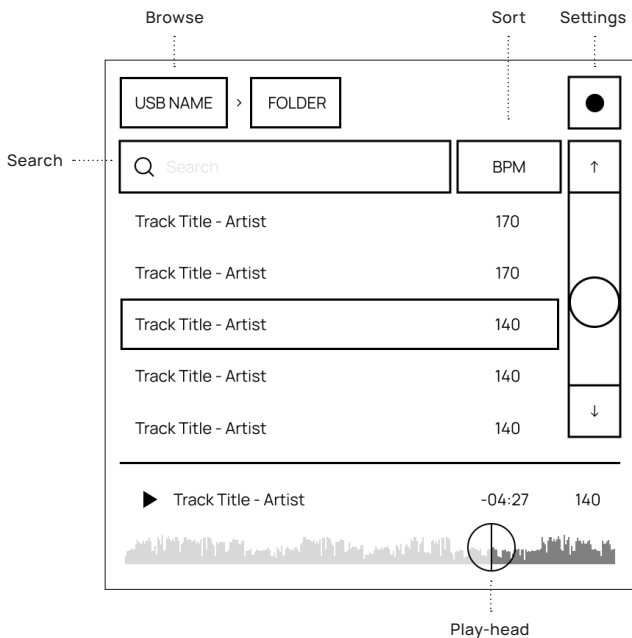

Step 4: Settings

- Select your control medium
- Adjust input gain if needed

Input Level Output Level Exit

Control Speed: 33 RPM 45 RPM 78 RPM

Control Medium: Serato 2A

Input Gain: 1.0

Control Source: Phono Line

BPM Range: 70 200

BPM Quantize: Low Precision


</> ☾


Dev Info Sleep Mode (Tap to wake)

The image shows a settings menu with various controls. At the top, there are two horizontal sliders labeled 'Input Level' and 'Output Level', and an 'Exit' button with an 'X' icon. Below these are several settings: 'Control Speed' with three buttons (33 RPM, 45 RPM, 78 RPM), 'Control Medium' with a button labeled 'Serato 2A', 'Input Gain' with a circular knob set to '1.0', 'Control Source' with two buttons ('Phono' and 'Line'), 'BPM Range' with two circular knobs set to '70' and '200', and 'BPM Quantize' with a button labeled 'Low Precision'. At the bottom left, there are two icons: a code symbol '</>' and a moon symbol '☾'. Dotted lines connect these icons to labels at the bottom: 'Dev Info' for the code icon and 'Sleep Mode (Tap to wake)' for the moon icon.

Step 5: Play

- Use a control record to playback and pitch your digital file
- Activate loops
- Long-press CUE to move the master cue point
- Short-press CUE to cue
- Tap waveform at top to switch to file browser
- Drag play-head to skip through a track
- Long-press top-left icon for internal player

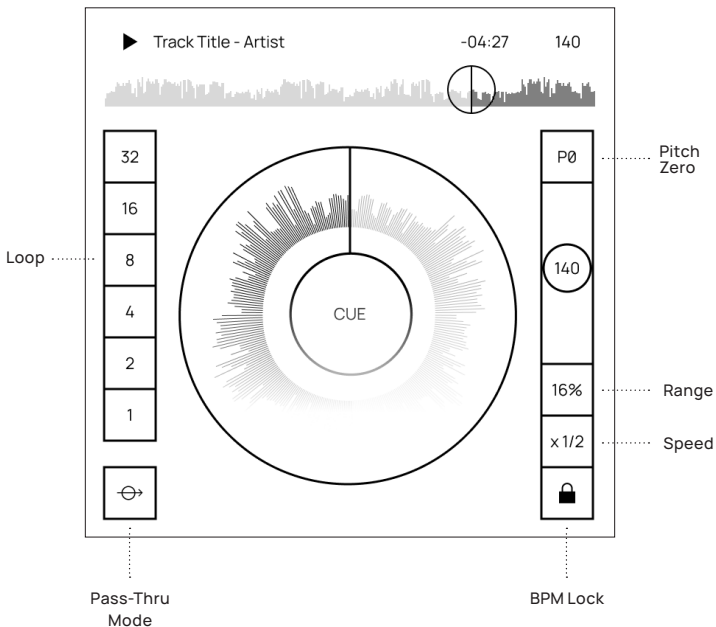

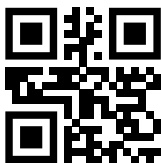

docs.nap.works
support@nap.works